

inReach® Professional User Quick Reference Guide **GARMIN.**

Your inReach user account is managed through the Garmin Explore™ website at explore.garmin.com. You can view and edit features allowed by your administrator, such as your map settings, messages, contacts, and personal information.

⚠ WARNING

Messaging, tracking, and SOS functions require an active satellite subscription. Always test your device before you use it outdoors.

NOTICE

Some jurisdictions regulate or prohibit the use of satellite communications devices. It is the responsibility of the user to know and follow all applicable laws in the jurisdictions where the device is intended to be used.

Account

⚠ CAUTION

You should verify your account information, because this information may be used in an SOS emergency.

The account tab displays your account details, emergency contacts, SMS configuration, and information about testing your device.

Syncing Devices

Changes made on the Garmin Explore website must be synced to your device before use.

1. From the **Plans & Devices** tab, select **Sync & Update**.
2. Follow the on-screen instructions to sync your account changes to a device.
3. Select **Collections** to choose which Collections to sync with your device and share on your MapShare™ page.

Syncing Data Using a USB Cable

To sync changes to the inReach Explorer®+, inReach SE®+, inReach Mini, and legacy inReach devices, use the **inReach Sync** desktop application and a USB cable.

1. Connect the USB cable to your device and your computer.
2. From the **Plans & Devices** tab, select **Sync & Update**.
3. If you have not previously installed the **inReach Sync** application, follow the on-screen instructions to install the application on your computer.
4. Open the **inReach Sync** application.
5. Follow the on-screen instructions to complete the sync.

Syncing Data Using the Garmin Explore App

To sync changes to the GPSMAP® 66i/86i and newer devices, use the Garmin Explore app. You must pair your compatible device with the Garmin Connect™ app before pairing it with Garmin Explore.

1. From the main menu on your device, select **Setup > Bluetooth** to enter pairing mode.
2. From the app store on your smartphone, install the Garmin Connect and Garmin Explore apps.
3. Open the Garmin Connect app, log in with your username and password, and follow the on-screen instructions in the app to pair your device.
4. Open the Garmin Explore app, and log in with your username and password.

Note: You must use the same login credentials in both apps.

5. Select **Pair Device**, and select your device.

After pairing, changes made to data begin to sync automatically.

Syncing Data Using File Based Configuration

To sync changes to the GPSMAP 66i/86i and newer devices, you can use the File Based Configuration option if you'd prefer not using the Garmin Connect and Garmin Explore apps.

File Based Configuration must be set up by your administrator. Your administrator can provide a file to sync changes using a microSD® card or USB cable.

Messages

On the Messages tab, you can edit your Preset and Quick Text messages.

Preset Messages

Preset messages are a convenient way to send messages to specific contacts. You can create three customized preset messages.

1. From the **Messages** tab, click **Edit** next to the preset message.
2. Enter a message.
3. Add recipients for the message.

You can use a semicolon to separate recipients.

4. Click **Done**.

Quick Text Messages

You can save time by using Quick Text messages instead of composing a message using the on-screen keyboard.

Adding Quick Text Messages

1. From the **Messages** tab, click **Add** in the Quick Text messages list.
2. Enter a message.
3. Click **Save**.

Editing Quick Text Messages

1. From the **Messages** tab, click **Edit** in the Quick Text messages list.
2. Enter a message.
3. Click **Done**.

Contacts

The Contacts tab lists your contacts and their details. You can have up to 200 personal contacts. Contacts added here will not be shared with other users on the account, but the administrator has visibility and master control over this list.

Adding a Contact

1. From the **Contacts** tab, click **Add**.
2. Enter information for the contact.
3. Click **Done**.

Editing a Contact

1. Select a contact.
2. Click **Edit** to make changes.
3. Click **Done**.

Social

The Social tab provides options for sharing your trip information with your social media accounts. You can also set up a MapShare page. MapShare is a web page similar to the Map tab of the Garmin Explore website. You can configure your MapShare settings to allow others to follow your travels in real-time and send messages to your inReach device.

Inbox

The Inbox tab allows you to view and delete all sent and received messages. You cannot compose messages from the inbox.


Map

You can use the Map tab to view tracking information for users on your account as well as monitor and message active users.

Map Filters


Map filters are used to alter your view of data, such as tracks, on the map. You can also use map filters to limit data by date. If you can't find the data you're looking for, confirm your map filters aren't hiding it.





Map Types


You can switch between topographic, OpenStreetMap, aerial imagery, and road maps using the  button in the upper-left corner of the map.


Map Features

 Allows you to hide and show user data.


 Messaging options:

-  Allows you to request the user's location.
-  Allows you to activate tracking on the user's device.
-  Allows you to send a message to the user.
-  Allows you to send a location to the user.

 Allows you to center the map on the user's most recent location.

 Allows you to expand messages and track points on the map.

Messages List

The messages list shows recent messages sent from a user's device. You can click  to view more messages.

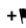 

Library

You can create waypoints and routes and view them on the Map tab. If you use the mobile app, you can sync the library with your smartphone. On some inReach models, you can sync waypoints and routes to your device.



Waypoints

Waypoints are used to mark locations with names and icons.

Creating a Waypoint

1. From the map, click .
2. Select a location on the map.
3. Edit the waypoint details.
4. Click .

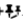 

Exporting Waypoint Details

1. Select a waypoint.
2. Select .
3. Edit the waypoint details.
4. Click .

Routes

Routes provide navigation on your device and let MapShare viewers see where you are headed.

Creating a Route

1. From the map, click .
2. Select a starting location.
3. Select additional points to create a line for your route.
4. Double-click the last point to complete the route.
5. If necessary, enter a name for the route.
6. Click .


Collections

You can save related waypoints, routes, and tracks in collections. You can sync collections with your devices and the Garmin Explore app.

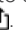 
Importing and Exporting Map Data

You can import GPX, KML, and KMZ files or export KML or GPX files. The export file contains the data currently visible on the map.

Importing

1. From the map, click .
2. Follow the on-screen instructions to import the files and add them to a collection.

Exporting

1. From the map, use filters to limit the data to export, or remove filters to show all data.
2. Click .
3. Select the file type.

Getting More Information

Go to support.garmin.com for product support, documentation, FAQs, training videos, and more.

Garmin®, the Garmin logo, GPSMAP®, inReach®, inReach Explorer®, and inReach SE® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Connect™, Garmin Explore™, and MapShare™ are trademarks of Garmin Ltd. or its subsidiaries. Powered by Garmin IERCC. These trademarks may not be used without the express permission of Garmin.

The BLUETOOTH® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. microSD® and the microSDHC logo are trademarks of SD-3C, LLC. Other trademarks and trade names are those of their respective owners.